



Bounce Back®

How To Join Bounce Back® Horse Fence Rail

The information provided is suggested only. It is up to the individual to ensure they use the correct fencing method suitable for their situation.

Acacia Products will not assume responsibility for design choice by the installer. If unsure it is recommended that the owner of the property seek further advice through an approved Fencing Contractor.

- ☎ 02 9756 6077
- ✉ bounceback@acaciaproducts.com.au
- 📍 fencing4horses.com.au

Joining Lengths of Bounce Back® Horse Fence

Lengths of Bounce Back® Horse Fence and other off cuts may be easily joined using our double vice wire joiners.

Visit the website


fencing4horses.com.au/product/wire-vice-joiner-join-horse-fence-rail/



- 1 Mark both beads, on each section of rail to be joined, with a marker 40mm from the end of the rail. Using a pair of snips, or knife, cut along the inside of the bead to the mark made in stage 1.



- 2 Bend the centre panel out of the way and then use our wire strippers to remove the plastic from the wire (similar to rail preparation for attachment to the end post). Repeat for all 4 wires to be joined.

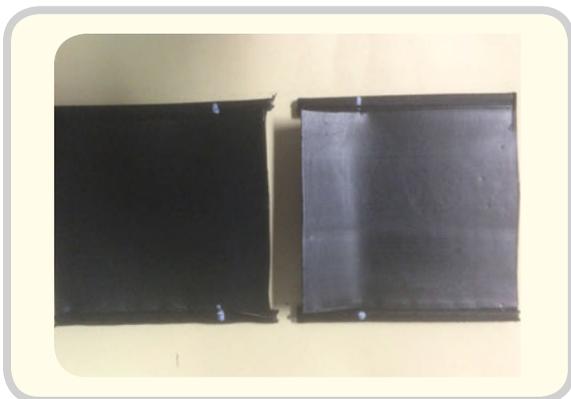

Joining Lengths of Bounce Back® Horse Fence - Continued

- 3 Remove 5mm of the wire from each exposed length with a pair of bolt cutters. This will leave 35mm of exposed wire which will fit the wire vice. It will also leave 40mm of the centre polymer panel which provide 5mm overlap in each direction of the join.



- 4 Insert the exposed lengths of wire into each end of the wire vice joiner as shown below. When completed there should be no exposed wire, and there should be a small overlap in the centre polymer panel so that no gap appears in the rail.



Other Resources and Information

For further information and easy to follow videos on Bounce Back® Horse Fence installation we suggest you visit fencing4horses.com.au/installation-page.

